


Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

- 1 The starting point in a modular installation must be as near to the center of the room as possible
- 2 Snap perpendicular chalk lines that intersect at the center of the room. Verify 90° angles with a laser square or a 3-4-5 triangle.
- 3 An optional third chalk line can be snapped 14 3/8" from the first chalk line to assure tile placement.
- 4 Test a dry-install for pattern layout and placement.
- 5 Starting on center, install tiles in a monolithic, diagonal, or random pattern.



- 6 To ensure proper alignment of tiles, follow the numbered tiles featured.
- 7 Flow into the adjacent quadrants outward toward the perimeter walls. When installing at the perimeter walls, make perimeter cuts at this time.
- 8 For additional questions regarding varying layouts please contact Shaw Product Support at 800.471.742.

Directional arrows are featured on the back of the tile. Numbers within the arrows are for manufacturing purposes and are not related to installation.

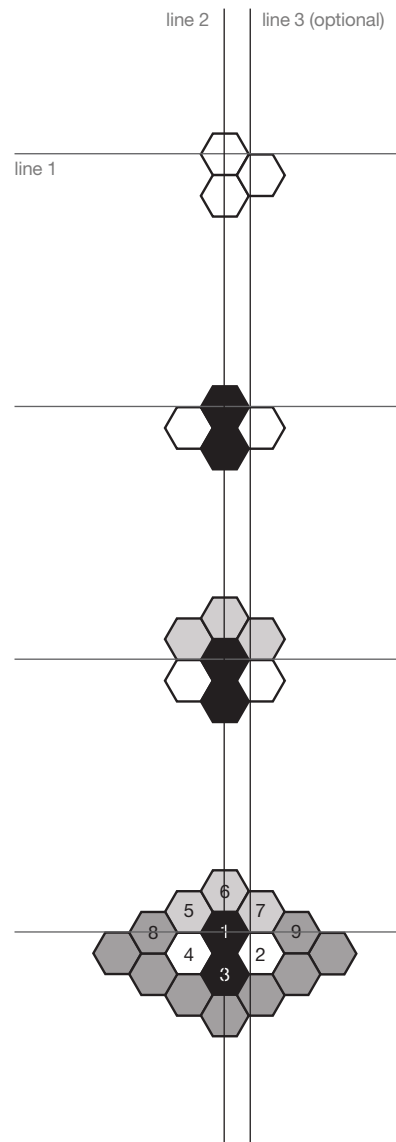

For more information on installing Hexagon, including an instructional video, visit [shawcontractgroup.com](http://shawcontractgroup.com), call 800.471.SHAW, or scan the QR code to the left.